

# Deebach

## Firmware Update Manual

1. Introduction .....	2
2. Install the Update Tool .....	2
3. Firmware Update .....	9

---

# 1. Introduction

This manual aims to help you get the latest software programs for your keyboards, digital pianos, digital drums and electric organs.

The update process includes two major steps:

1. Install the update tool to your PC.
2. Update your instrument with the tool.

## 2. Install the Update Tool


### 2.1 Preparation



- Make sure your PC has the operating system Windows XP, Windows 7 or Windows 10.
- Disengage the anti-virus programs or security software on PC if there is any.
- If you have installed the update tool, you may skip the following steps and go to **Firmware Update**.


### 2.2 Double click the setup icon.




### 2.3 Select your language, then click “Next>” to continue.

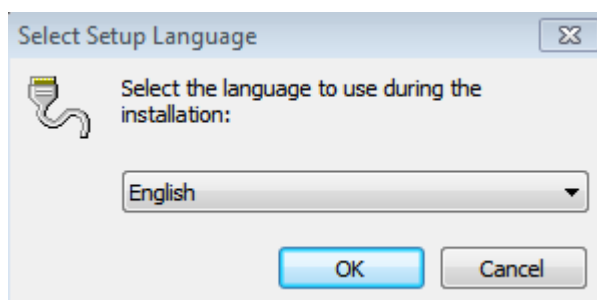


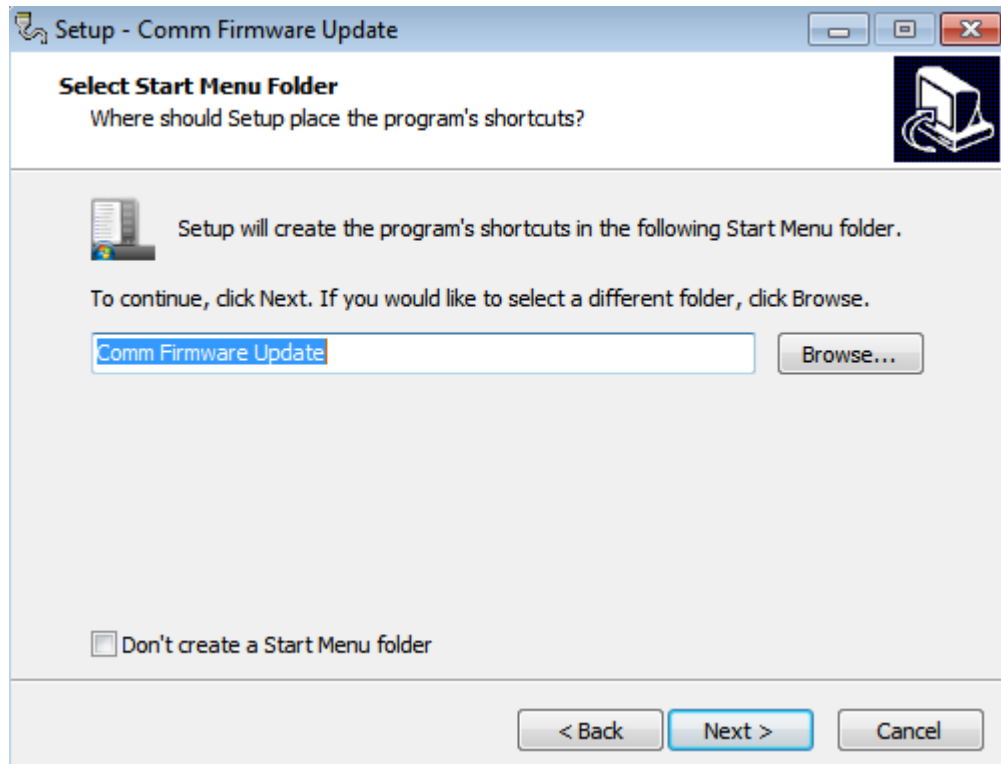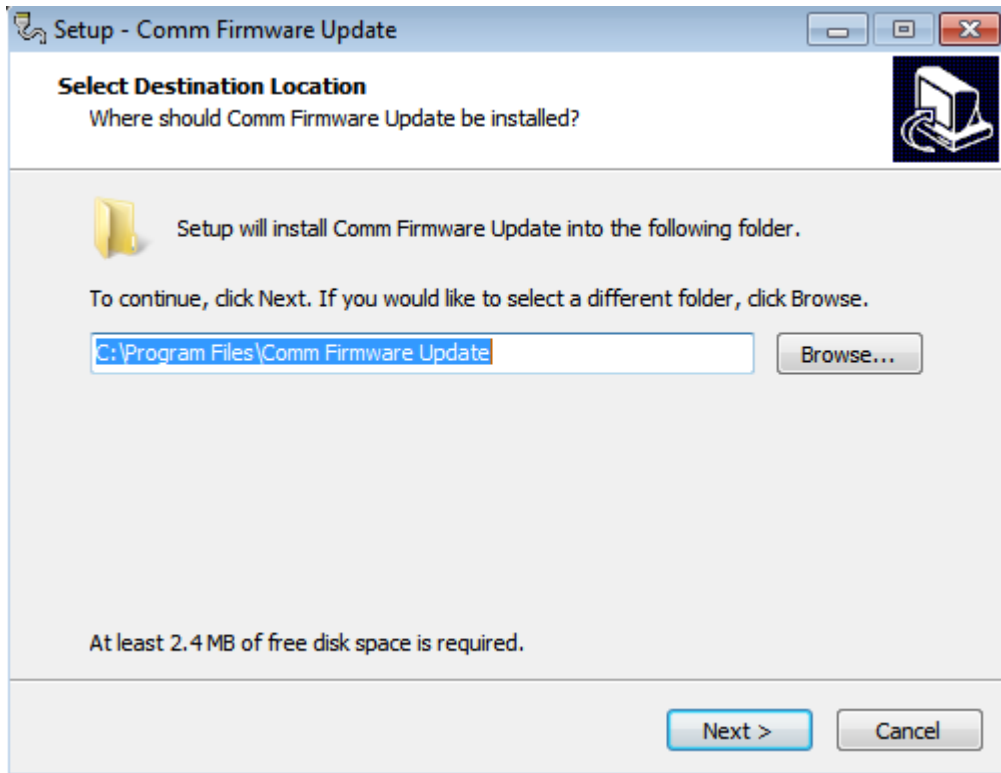

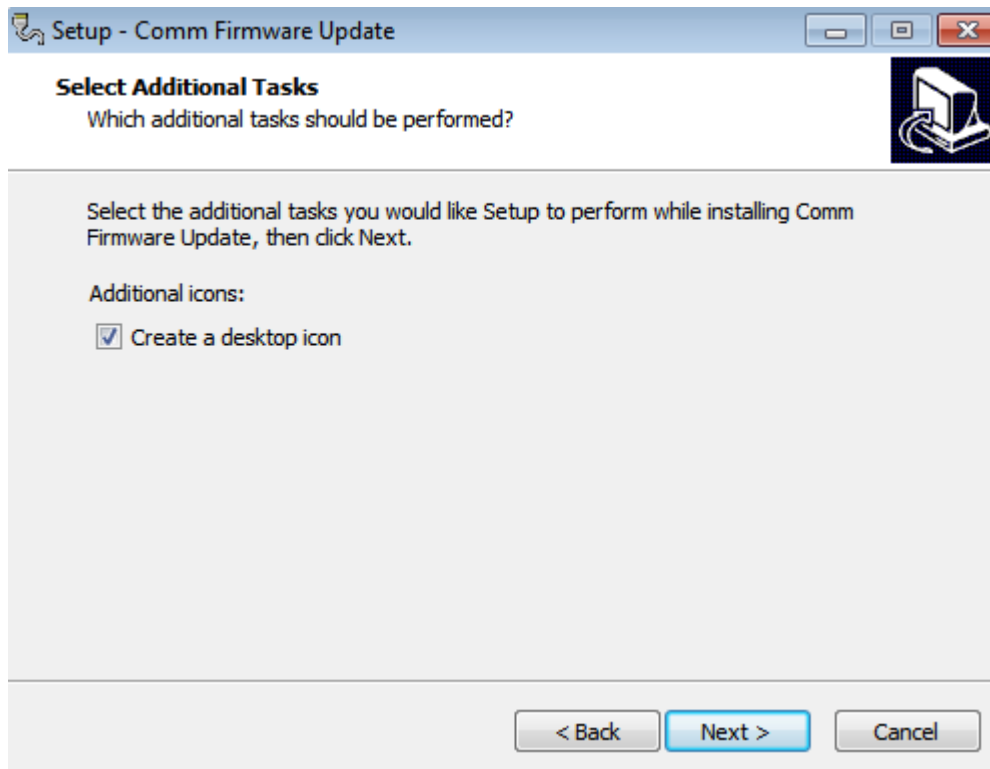




## 2.4 Click “Install” to start the installation.


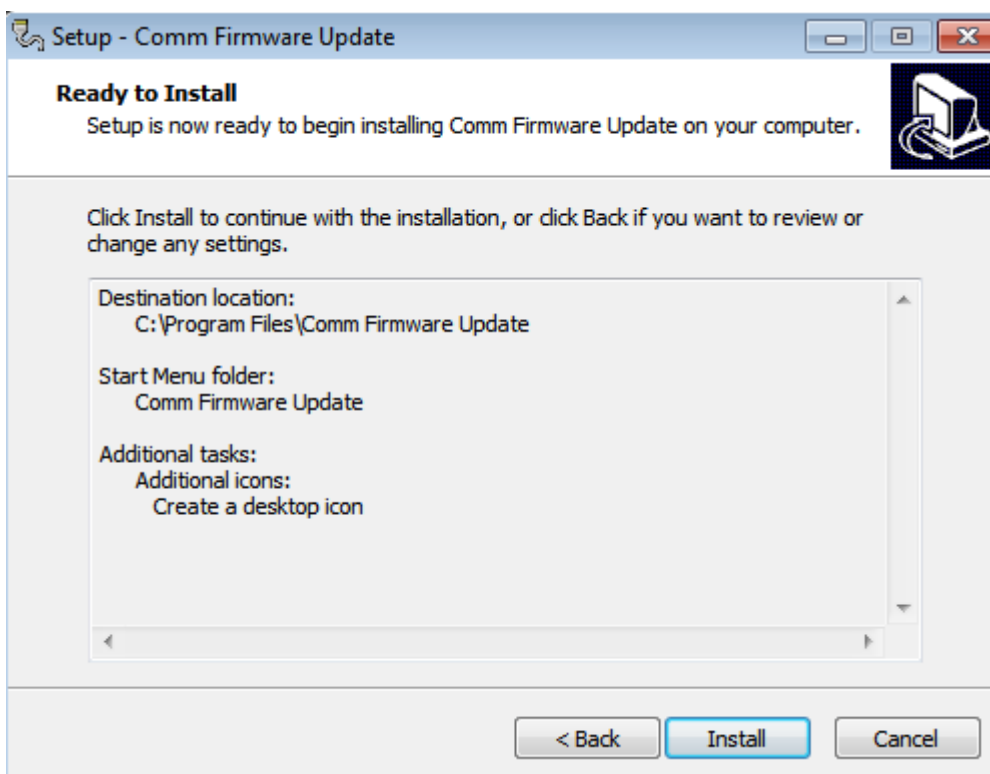


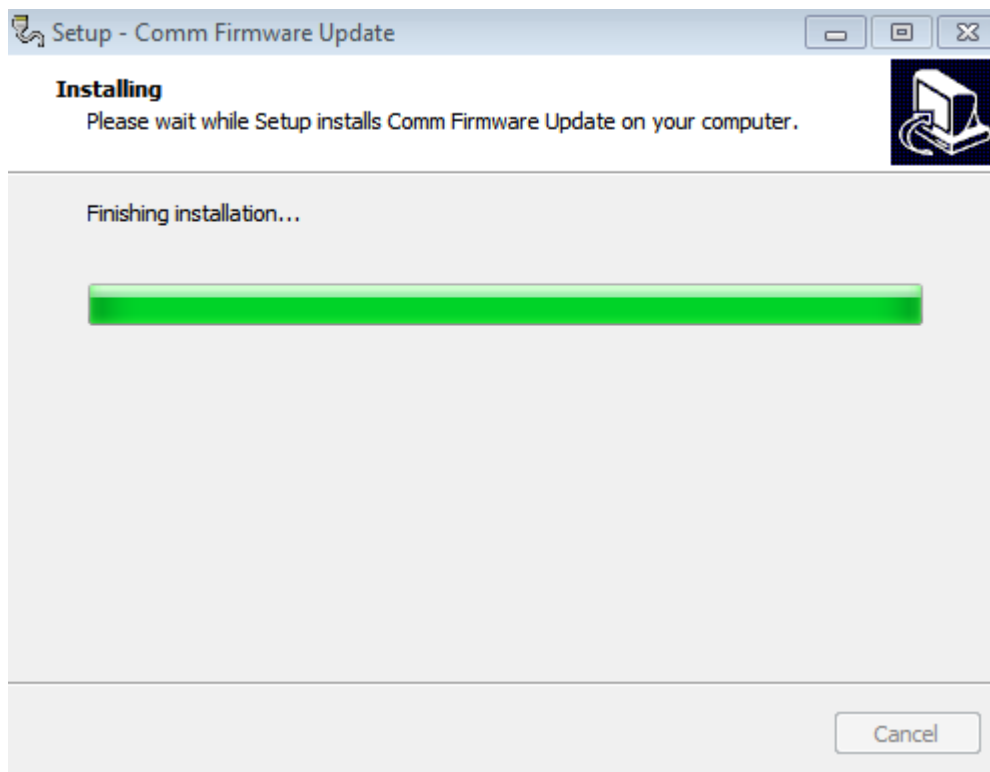

## 2.5 Click “Next” to install the device driver.

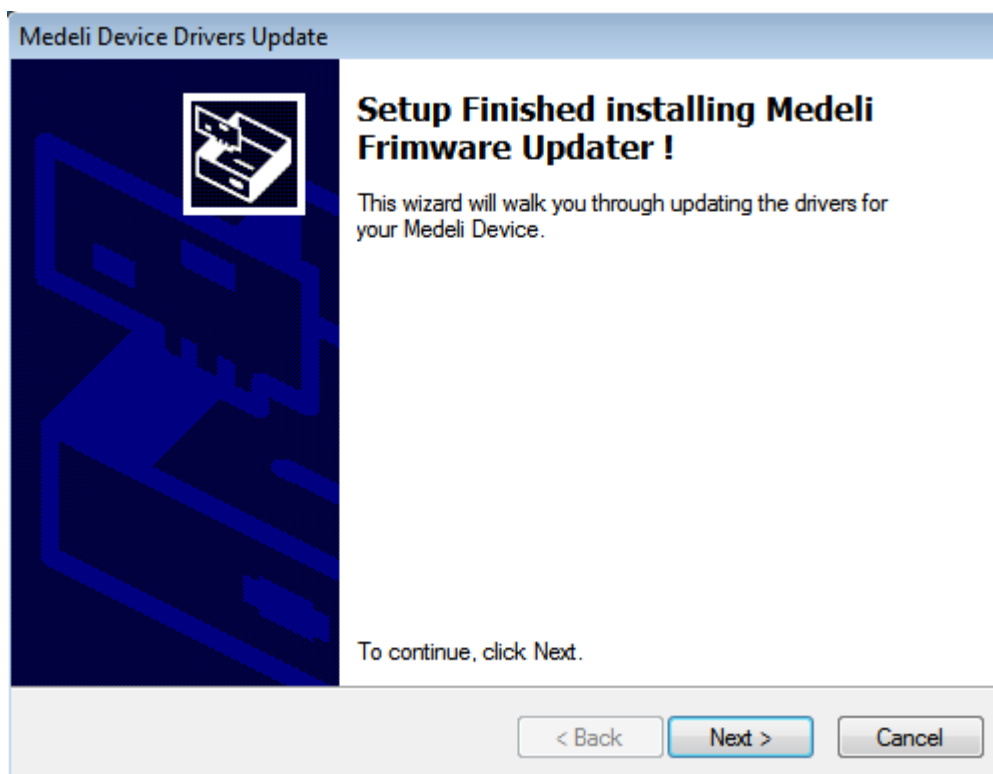

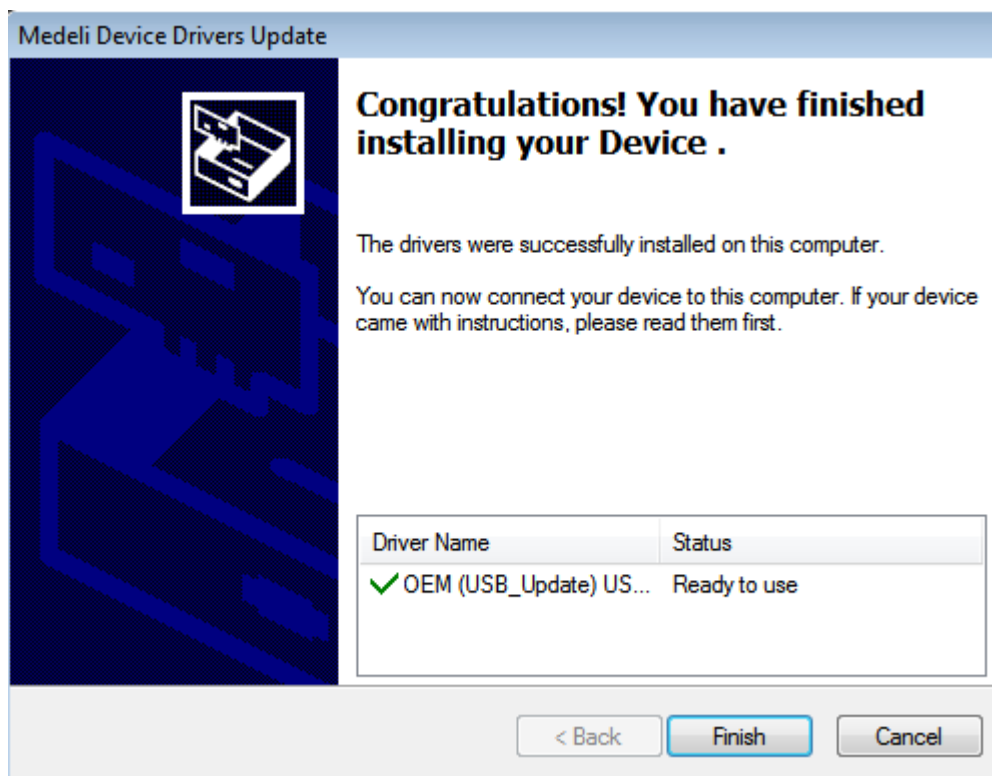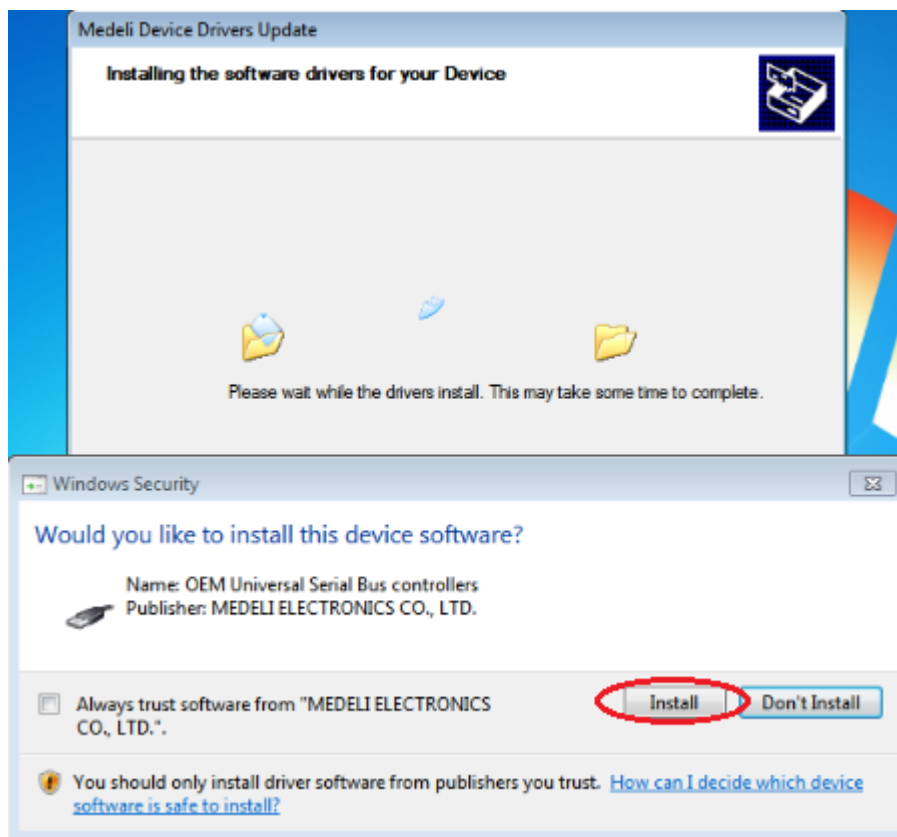


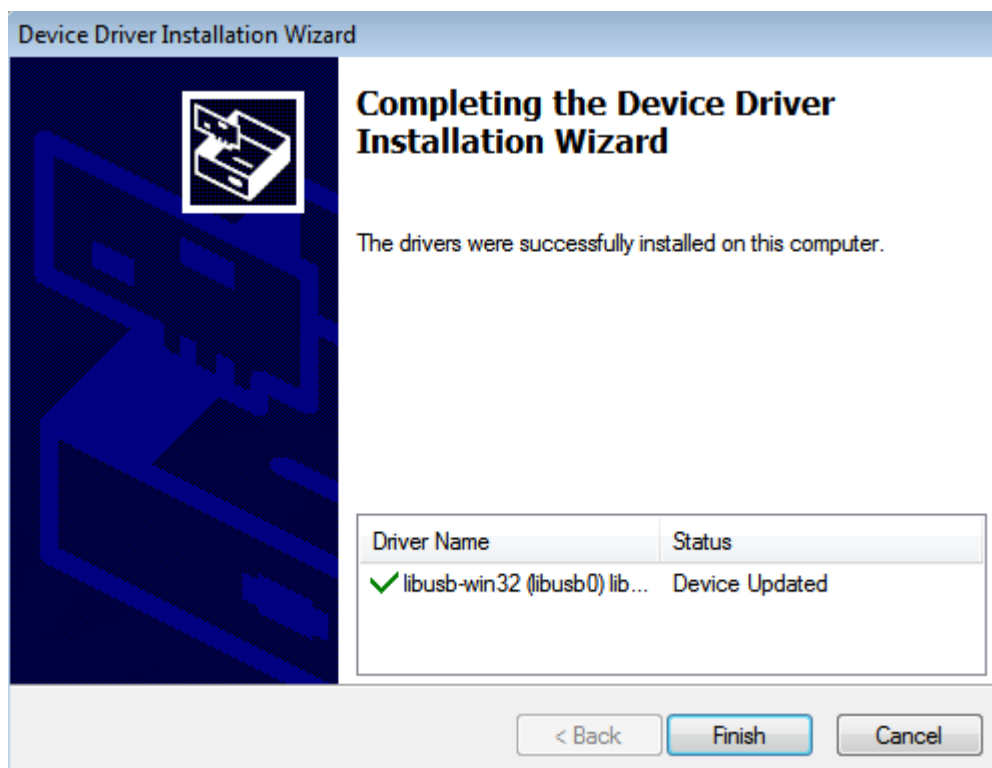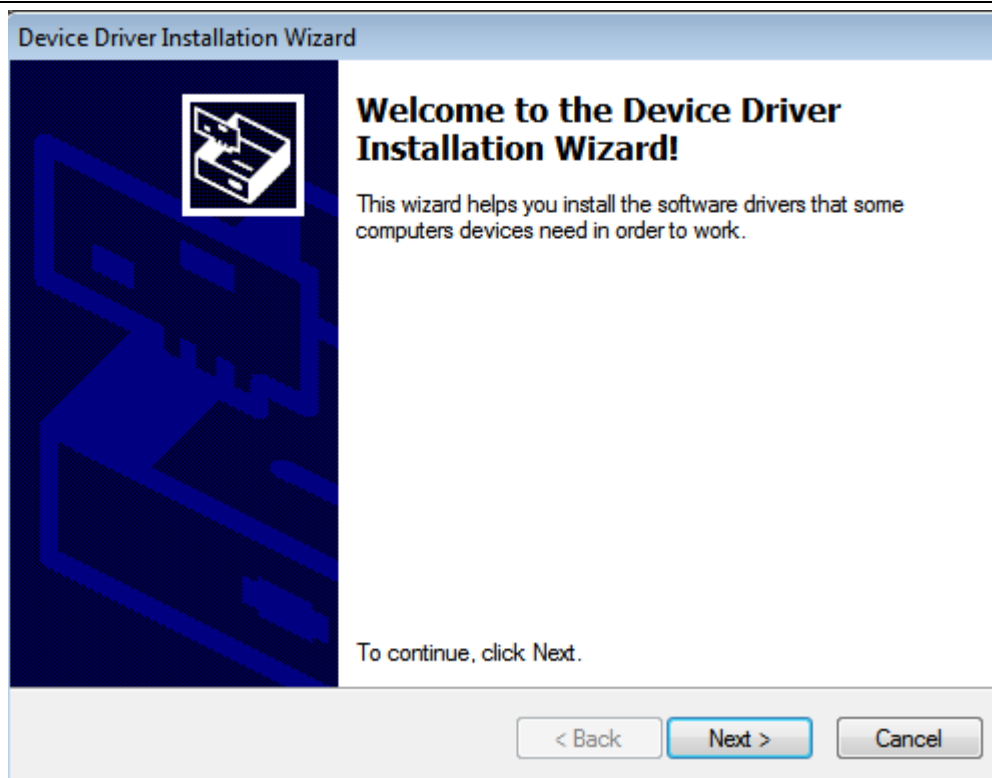

**Note:** If the device driver is not installed or is not properly installed, please refer to [«Install the Update Tool driver»](#), install manually the device driver.

---

## 2.6 Click “Finish” to complete the installation.

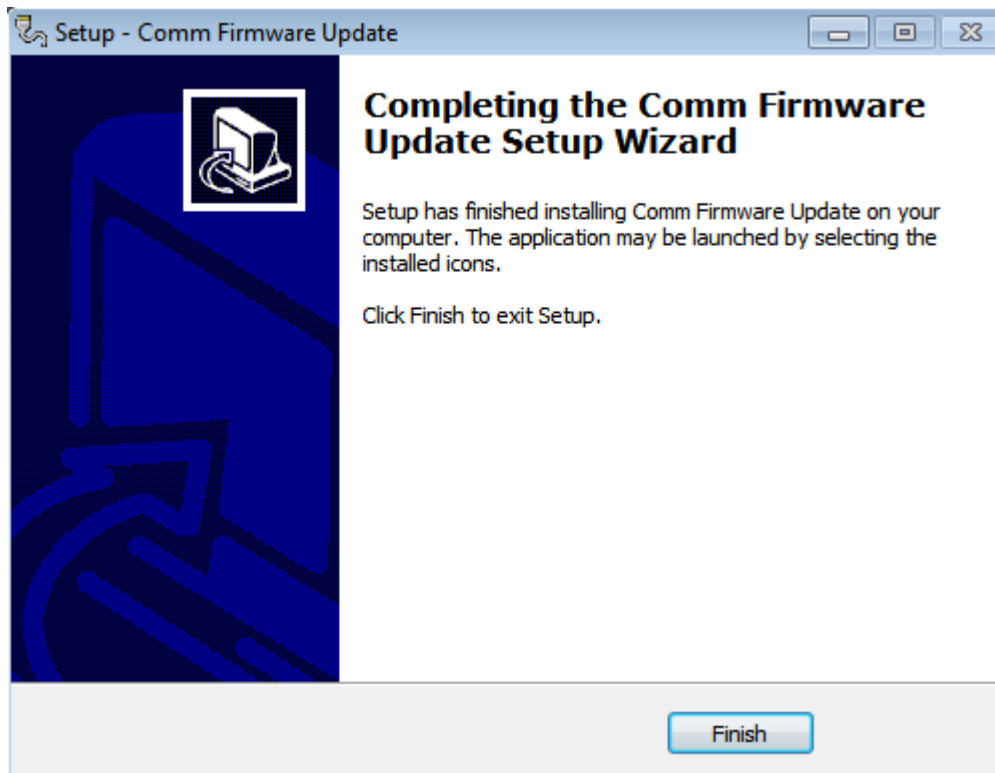

## 2.7 Installation is finished. You will find the Firmware update icon on the desktop.





---


## 3. Firmware Update

### 3.1 Preparation

- Connect your instrument to a PC with a standard USB cable.

**Note:** Never connect the PC with more than one instrument for each update process.


- Make sure the power supply is reliable for the update.

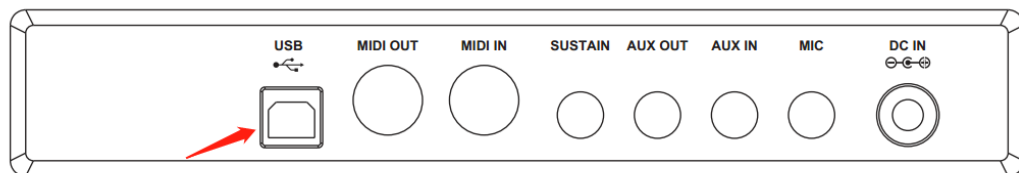

### 3.2 Double click the Firmware update icon on desktop.



- The Firmware Update window will pop up. Make sure you get the message below before proceeding.

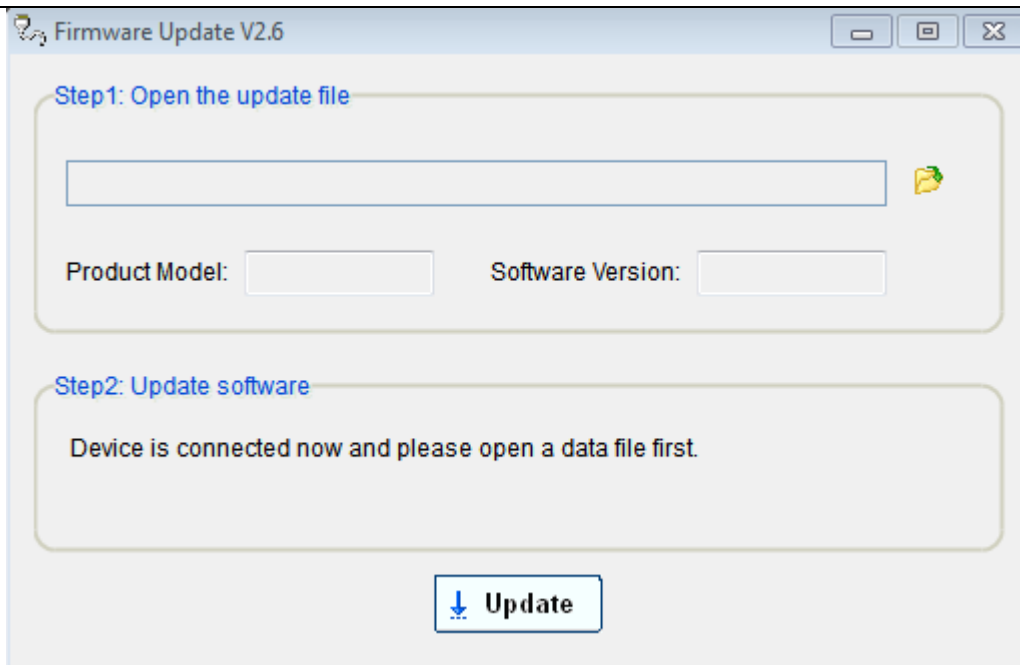


**Note:** If you fail to get the above message, please try again:


- Check the USB connection or try with another USB cable.
- Try with another USB port on PC.
- Double click the update icon to start the process again.

### 3.3 Open the update file


The pictures blow shows the update progress of a keyboard.

- Open the update file “xxx.DAT”.

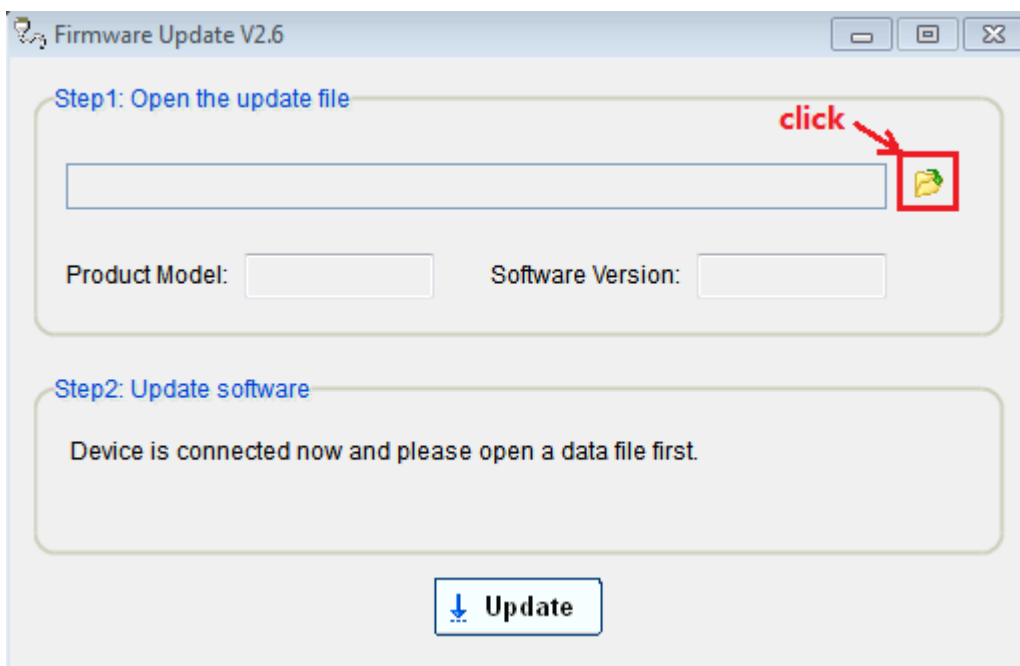

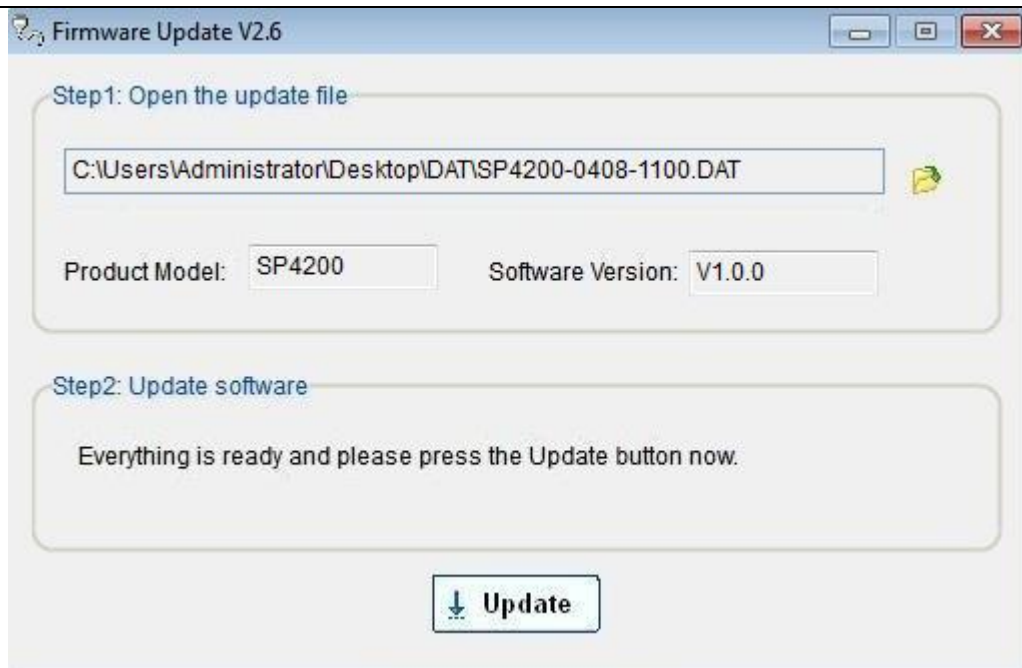


- Check the product model and software version. Now the update is ready.

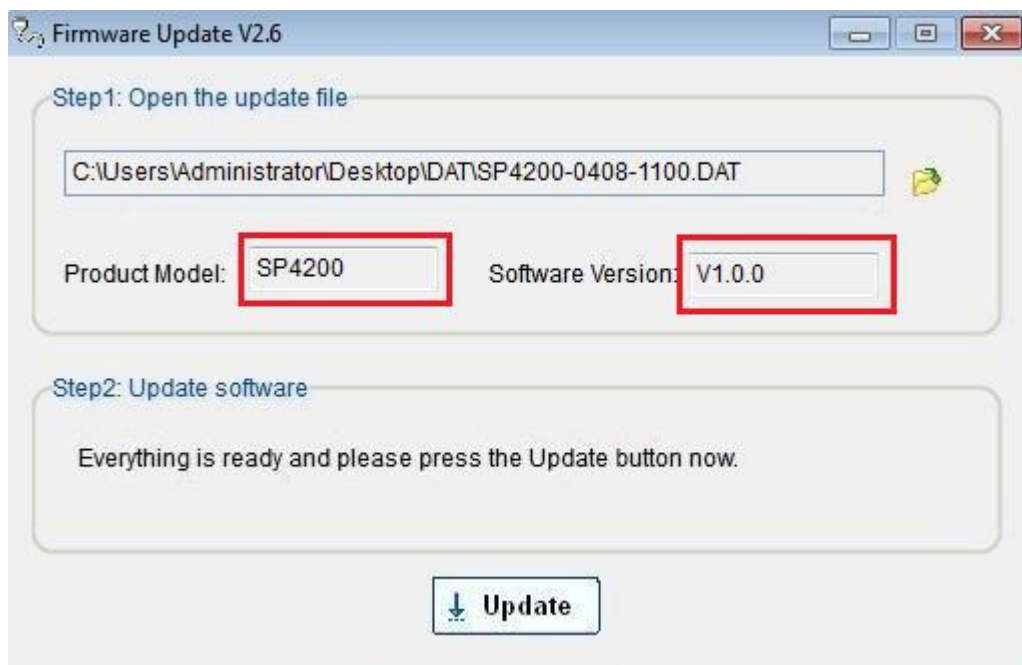

### 3.4 Enter the Update Mode

Take the keyboard as an example, press and hold **【STORE】 + 【M1】 + 【M3】** together and turn on the power, it will enter the update mode .

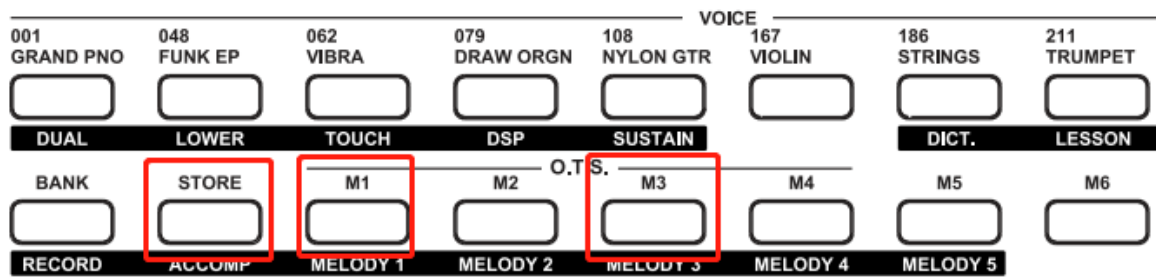


For Deebach BlackBox,


press and hold “UPDATE” and turn on the power, it will enter the update mode.

### 3.5 Click “↓Update” to start.

**Note:** Do not disconnect the power supply or turn off the instrument during the update!

**Note:** The progress bar may repeat several times before the update is finished.

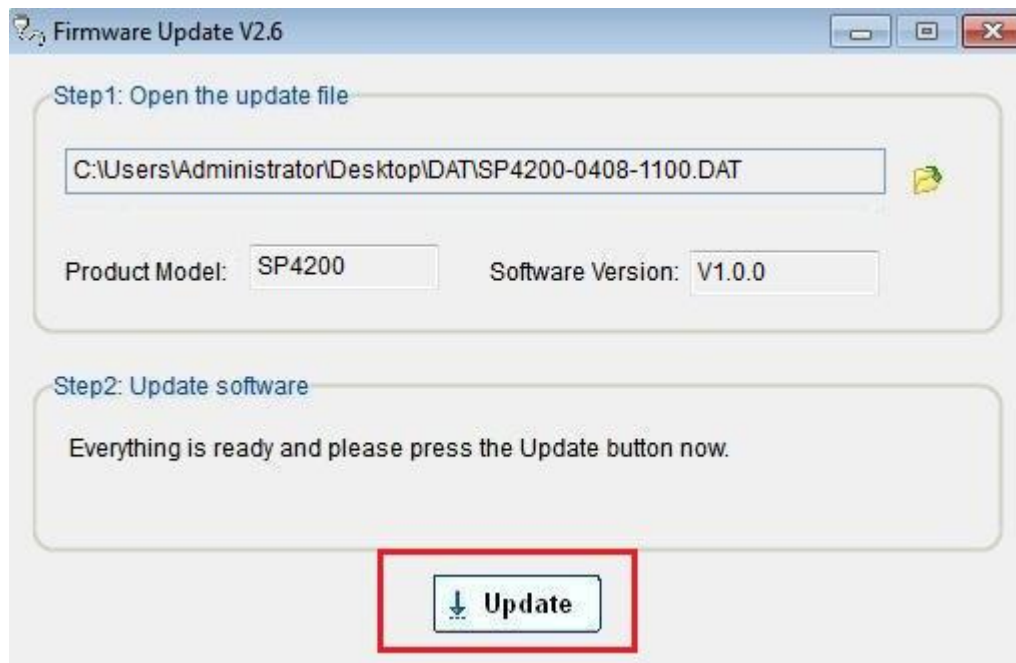

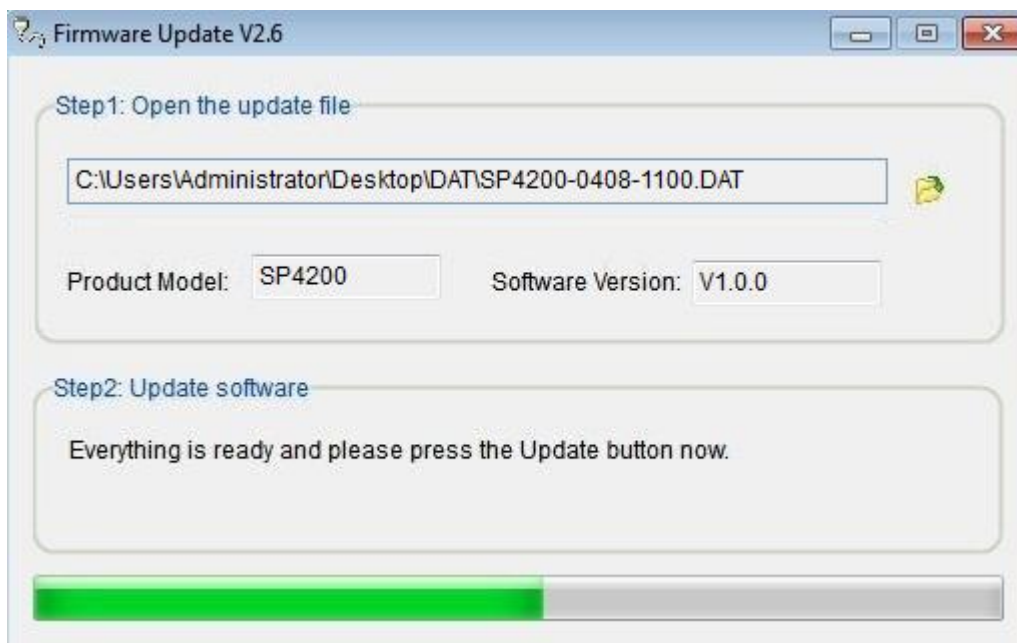

### 3.6 Finish the update.

- Click "OK" to finish the update process if you get the message "update successful".

The update is completed now.



#### Note:

- Close the update tool and restart your instrument, it will operate with the latest programs.
- If you need to update another instrument, please repeat **step 3.1 - step 3.6**.
- If any error occurs during the update, you may send the error message to our Support for a solution.

- The end -

---

## Deebach

**<http://www.deebach.eu/>**

E-Mail: [info@deebach.eu](mailto:info@deebach.eu)

+49 (0) 2162 - 353571

Technischer Support

Telefon: +49(0) 15771805131

E-Mail: [support@deebach.eu](mailto:support@deebach.eu)